



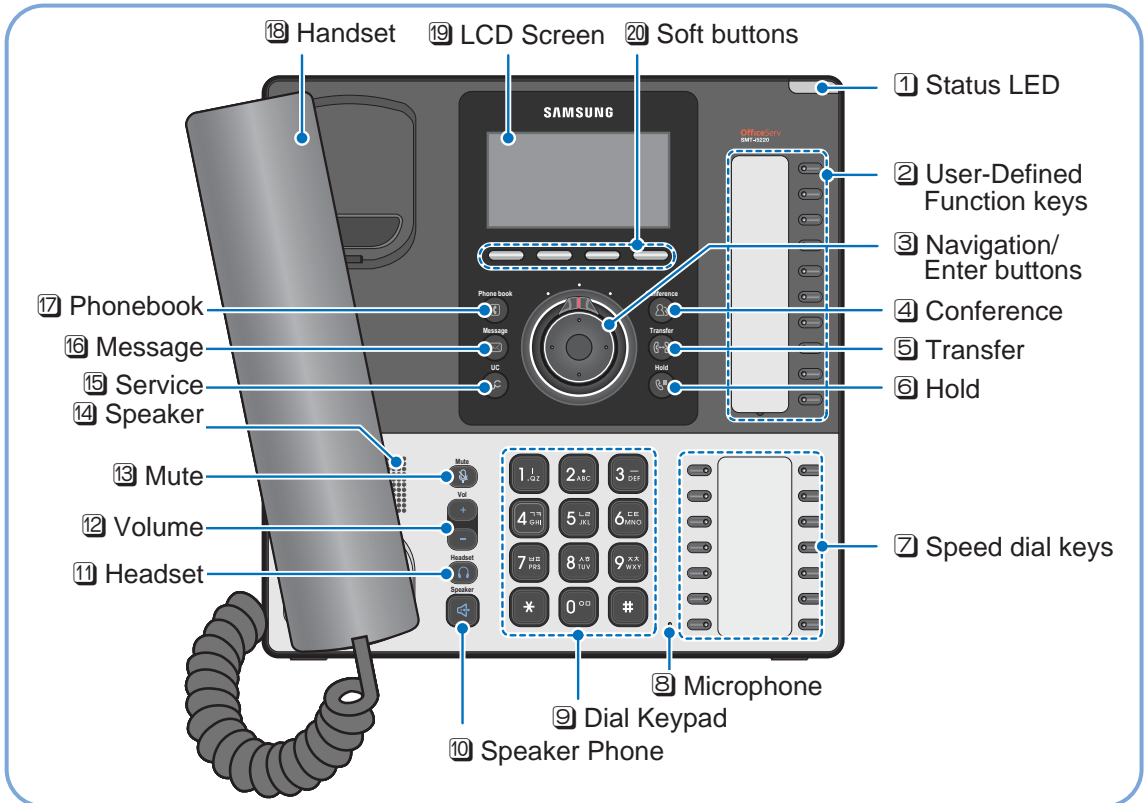

Locating of controls

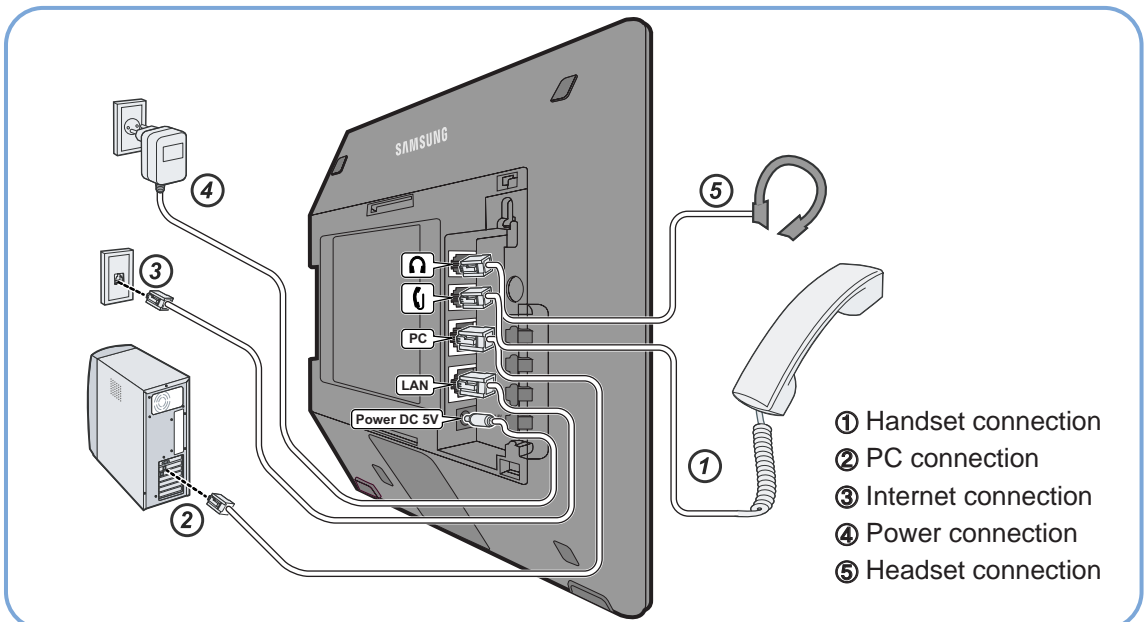

Connecting






Placing, Answering and Ending a Calls

<p>Placing a Call</p>	<p>Enter the Number</p> <p>Incase of normal phone mode → Send → Start Dialing</p> <p>Incase of Mobile phone mode → Send (Soft) → Start Dialing</p>
<p>Answering a Call</p>	<p>Talk</p>
<p>Placing a Call via Call Logs</p>	<p>Call Log (Soft) → Select the Number</p> <p>→ Send (Soft) or Enter[OK] of Navigation Buttons → Send (Soft)</p>
<p>Placing a Call via Phonebook</p>	<p>Phone book → Select the Group → Select the Group</p> <p>→ Send (Soft) or Enter[OK] of Navigation Buttons → Send (Soft)</p>
<p>To adjust the volume</p>	<p>During a call</p> <p>To increase → Vol +</p> <p>To decrease → Vol -</p>
<p>Ending a Call</p>	<p>To end a call</p>

LCD Screen Layout

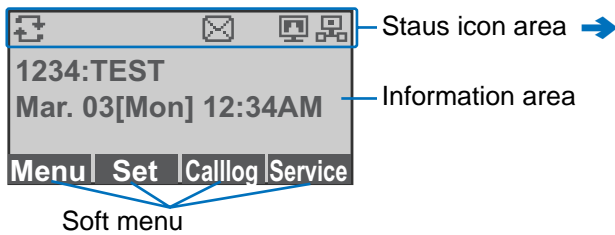

	Call Forwarding
	DND(Do Not Disturb)
	Mute On
	SRTP On
	New Text Message
	Speaker phone Mode
	Headset Mode
	PC Connection is operational.
	Server Connection is operational.
	Server Connection is unavailable.