Change the Speed dial numbers

Enter Programming

*00#

Press system

Enter password 22222

Press 2nd #

Enter Command 2501

2nd #

Speed dial location EG 1000

2nd #

2nd #

Enter new phone number including "0" for line out

2nd #

Press Y (=9) three times

2nd #

Press "C" to end programming