

Quick Reference Guide

Changing Date and Time

This guide will explain how to correct the date and time on the Samsung PBX using a handset.

Activate phone for system programming

Follow the steps below to enter system programming mode:

1. While your handset is on-hook, press **“Transfer”** and then dial **“200”**
The display shows [ENABLE CUS. PROG. PASSCODE]
2. Dial the four digit passcode: **“1234”**
The display shows [ENABLE CUS. PROG. - DISABLE].
3. Dial **“1”** to enable.
The display shows [ENABLE CUS. PROG - ENABLE].
4. Press **“Transfer”**

The keyset returns to its idle condition.

NOTE: You must begin programming within 30 seconds. Once you are in programming, any delay of more than 30 seconds between key strokes will cause the system to automatically close programming.

Enter or update date and time

Follow the steps below to change the date and time

1. Press **“Transfer”** and then dial **“505”**
The display shows the current date and time in the first row [OLD: 1042814:1200]
for 28/04/2014 12:00pm
2. In the second row you'll see
[NEW:WMMDDYY:HHMM]
Enter the correct date and time.
W: Day of week (0=Sunday, 6=Saturday)
MM: Month of Year
DD: Day of Month
YY: Last two digits of the year
HH: Hour in 24-hour notation
MM: Minutes
3. Press **“Transfer”** to save.

© Telequip 2016